

THE NEXT GENERATION

Digital Display Proportional Valve Driver

LE PSX

DIN rail mount

Features and Benefits

- ▶ Microcontroller design
- ▶ Independent adjustments (Incl. ramp up & ramp down)
- ▶ 4 digit extra bright seven segment LED display
- ▶ Large, easy-to-use adjustments and readout
- ▶ Display and adjust actual values (Current & Voltage)
- ▶ Wide range of supply voltage
- ▶ User selectable input type through menu setup (ex: 0 to 5V, 0 to 10V, 4 to 20mA)
- ▶ Wide ramp time range (0 to 99.5 Sec)
- ▶ Simple control with analog input, Locally supplied reference voltage
- ▶ Energy efficient PWM circuit/no heat sink required
- ▶ Current sensing maintains output regardless of changes in supply voltage and coil resistance
- ▶ Electronic limiting circuit/short circuit proof
- ▶ Reverse polarity, Command Input protection
- ▶ Load can be connected & disconnected live
- ▶ Mounting: DIN Rail
- ▶ Easy troubleshooting/cable length not an issue



CE

LE PSX Standard Specifications

Operating voltage:	9 to 36 VDC
Maximum output current:	3.00Amps
Input signal:	5V, 10V, 4 to 20mA
Maximum ramp time:	99.5 Sec
PWM / Dither frequency:	40-450Hz
Linearity:	1%
Operating Temperature:	-40° to +80° Celsius

Several Forms Available

NEW



Note: Customization of functionality and enclosure type are available as per customer request.

PART NUMBER SYSTEM

Proportional Solenoid Driver, Single, DIN rail mount open PCB Example: LE PSX

TYPE	MODEL	FORM	PARAMETERS = X
LE Lynch Electronics		S Single, DIN rail mount open PCB	
P Proportional Solenoid Driver			
			COMMAND INPUT 0 to 5V, 0 to 10V, 4 to 20mA
			MAX CURRENT OUTPUT 0.20 to 3.00A
			RAMP TIME 0 to 99.5 Sec


Stockholm
Turebergsvägen 5
SE-191 47 Sollentuna
Tel. +46 (0)8-59 470 470
Fax +46 (0)8-59 470 479

Göteborg
EA Rosengrens gata 29
SE-421 31 V:a Frölunda
Tel. +46 (0)31-499 490
Fax +46 (0)31-499 499

Malmö
Carlsbgatan 12A
SE-211 20 Malmö
Tel. +46 (0)40-699 81 80
Fax.+46 (0)40-699 81 81

LE PSX-0109-A

LE PSX DIMENSIONAL DRAWING

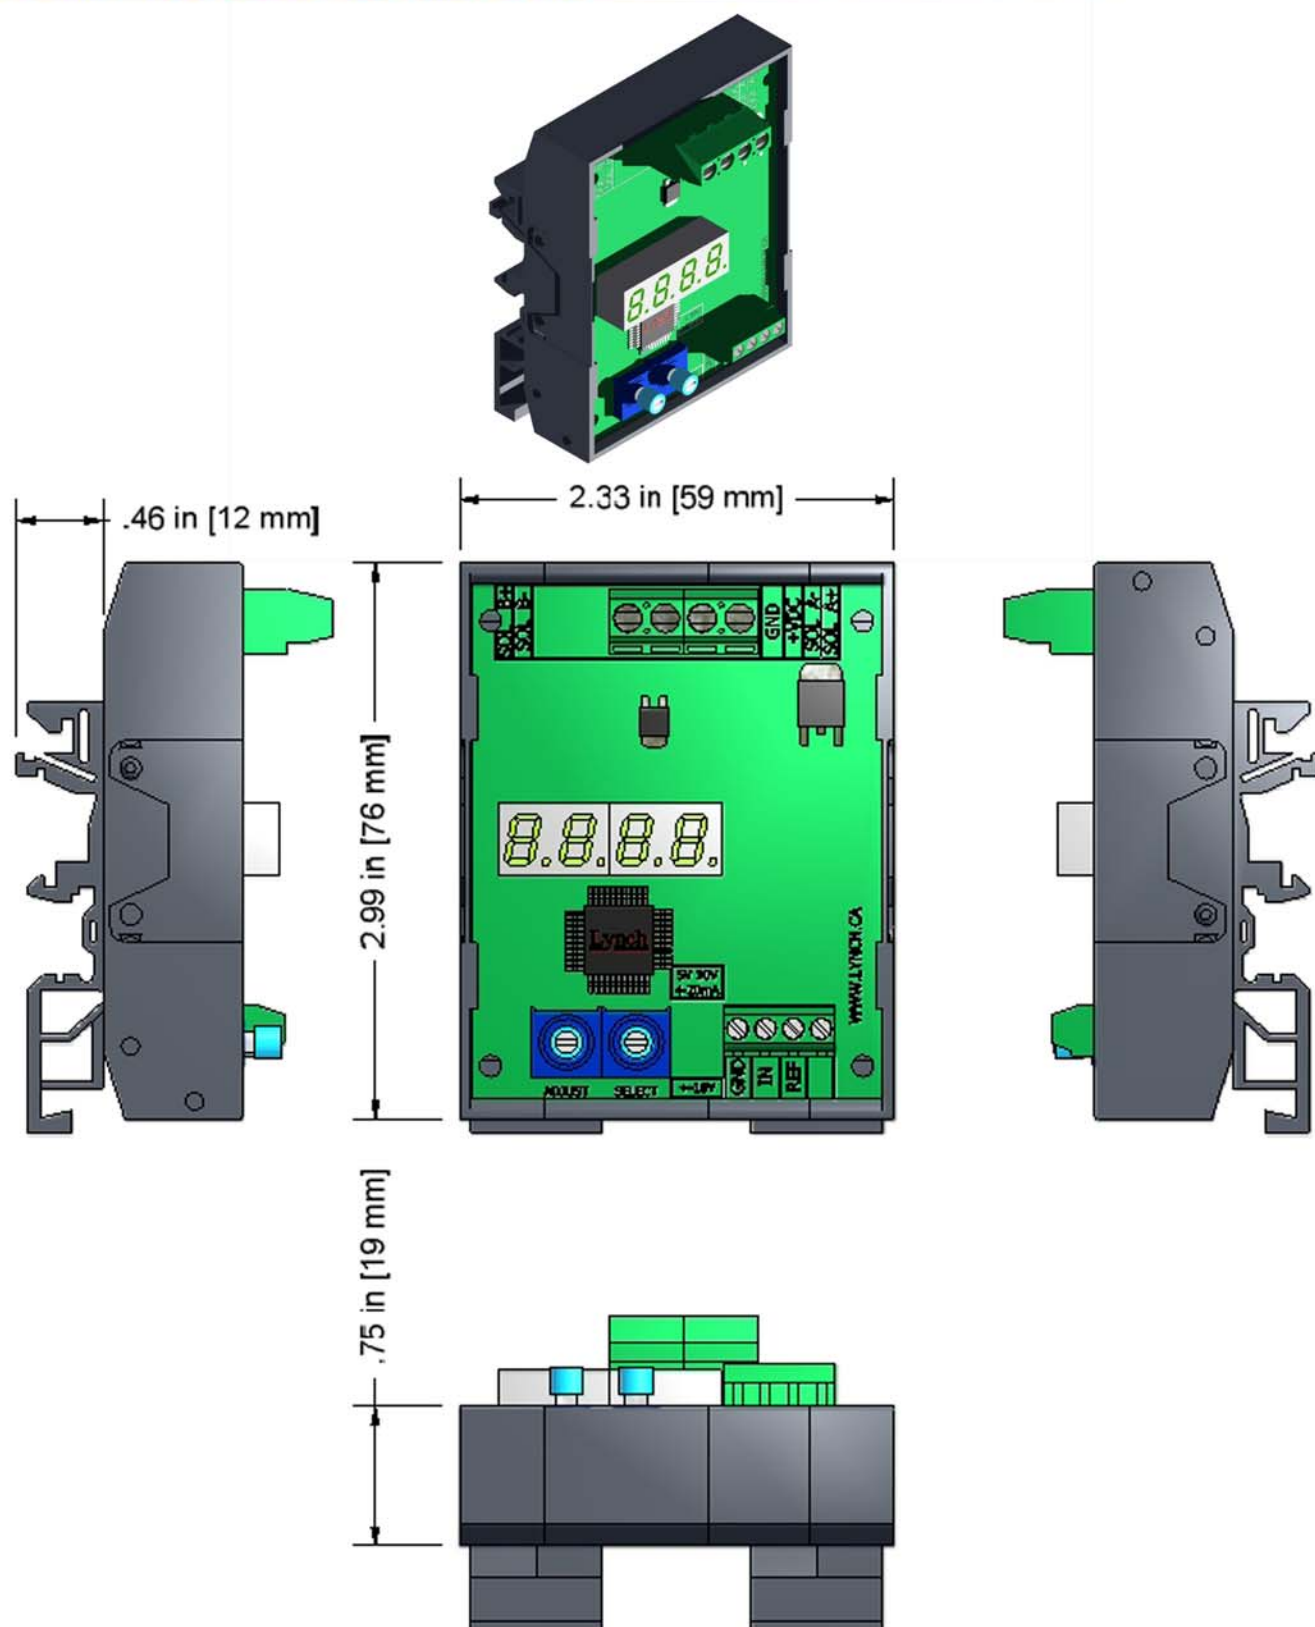

Stockholm
Turebergsvägen 5
SE-191 47 Sollentuna
Tel. +46 (0)8-59 470 470
Fax +46 (0)8-59 470 479

Göteborg
EA Rosengrens gata 29
SE-421 31 V:a Frölunda
Tel. +46 (0)31-499 490
Fax +46 (0)31-499 499


Malmö
Carlsгатan 12A
SE-211 20 Malmö
Tel. +46 (0)40-699 81 80
Fax. +46 (0)40-699 81 81

LE PSX-0109-A

LE PSX SCHEMATICS


EXTERNAL INPUT SIGNAL CONNECTION

"in" set to "10"

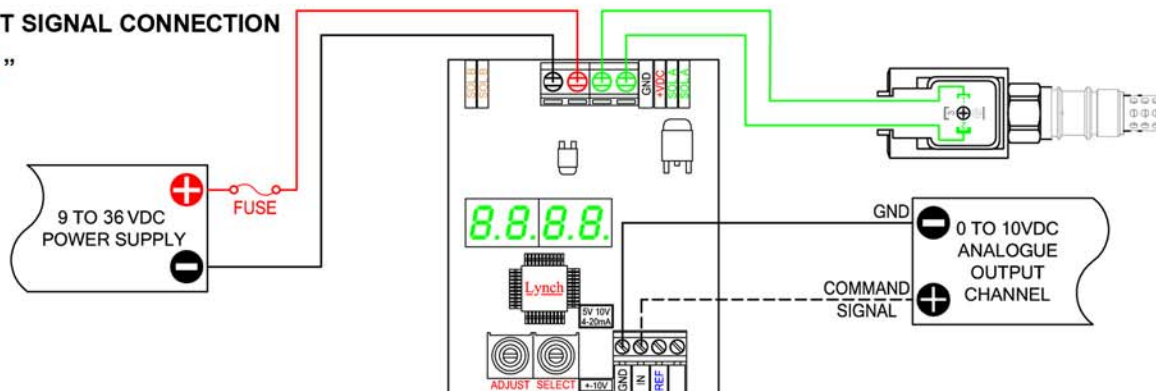


POTENTIOMETER CONNECTION

"in" set to "5"

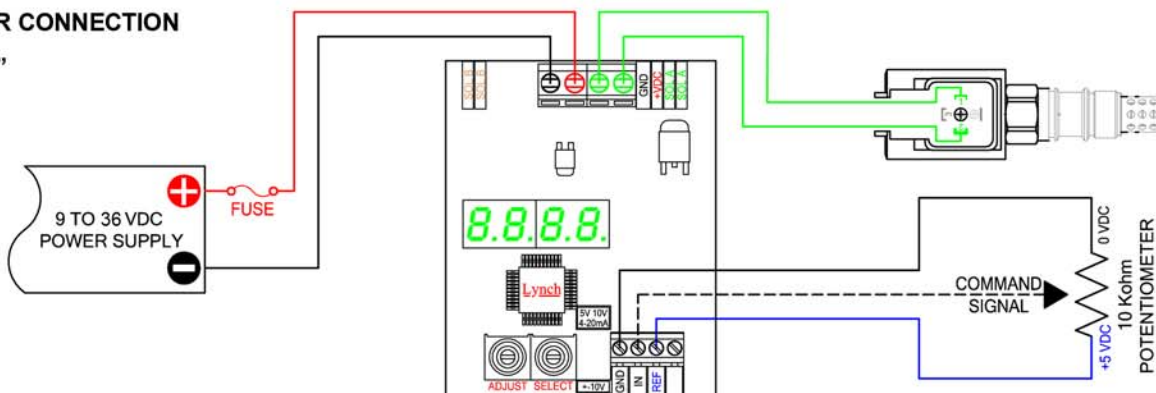

RAMP UP & DOWN ONLY OPERATION

"in" set to "5"

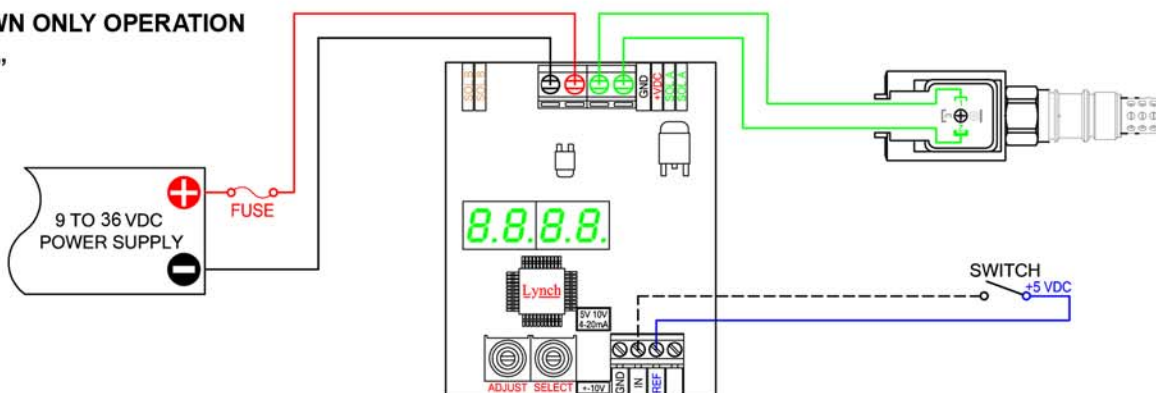

PLEASE NOTE: For "0 to 5 VDC" & "0 to 10 VDC" command input drivers, it is recommended to use independent negative conductors for power supply and analogue output channel (PLC/PC) to maintain command signal accuracy due to voltage drop on long cable runs.

Stockholm
Turebergsvägen 5
SE-191 47 Sollentuna
Tel. +46 (0)8-59 470 470
Fax +46 (0)8-59 470 479

Göteborg
EA Rosengrens gata 29
SE-421 31 V:a Frölunda
Tel. +46 (0)31-499 490
Fax +46 (0)31-499 499


Malmö
Carlsbgatan 12A
SE-211 20 Malmö
Tel. +46 (0)40-699 81 80
Fax. +46 (0)40-699 81 81

LE PSX-0109-A

LE PSX SCHEMATICS


EXTERNAL INPUT SIGNAL CONNECTION

"in" set to "420"

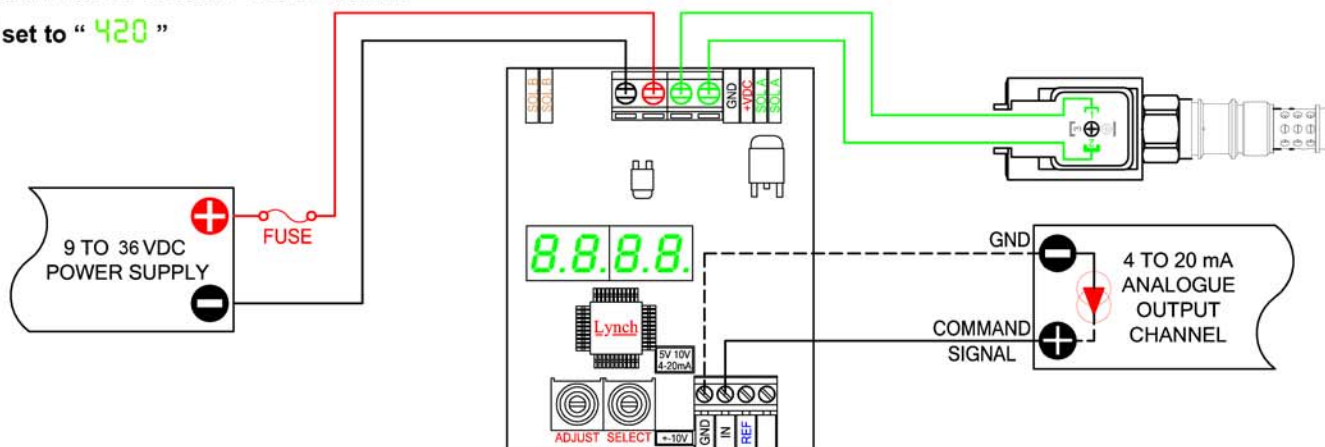

TWO WIRE TRANSMITTER INPUT CONNECTION

"in" set to "420"

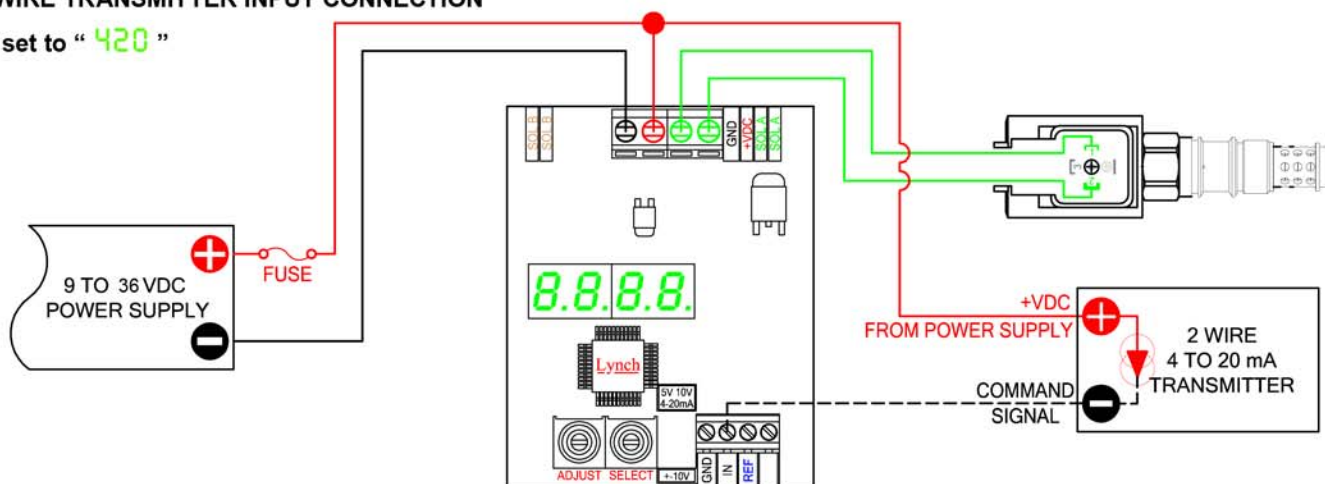

PLEASE NOTE: For "0 to 5 VDC" & "0 to 10 VDC" command input drivers, it is recommended to use independent negative conductors for power supply and analogue output channel (PLC/PC) to maintain command signal accuracy due to voltage drop on long cable runs.



This product has been designed and tested to meet specific standards outlined in the European Electromagnetic Compatibility Directive (EMC) 2004/108/EC
Emission: EN 61000-6-4: 2007
Immunity: EN 61000-6-2: 2005, EN 61000-4-2, EN 61000-4-4, EN 61000-4-6

Stockholm
Turebergsvägen 5
SE-191 47 Sollentuna
Tel. +46 (0)8-59 470 470
Fax +46 (0)8-59 470 479


Göteborg
EA Rosengrens gata 29
SE-421 31 V:a Frölunda
Tel. +46 (0)31-499 490
Fax +46 (0)31-499 499

Malmö
Carlsbgatan 12A
SE-211 20 Malmö
Tel. +46 (0)40-699 81 80
Fax. +46 (0)40-699 81 81


LE PSX-0109-A

LE PSX SETTING & RANGE GRAPHS


H_i: HIGH,
Maximum Current output, **0.20** to **3.00** [Amps]

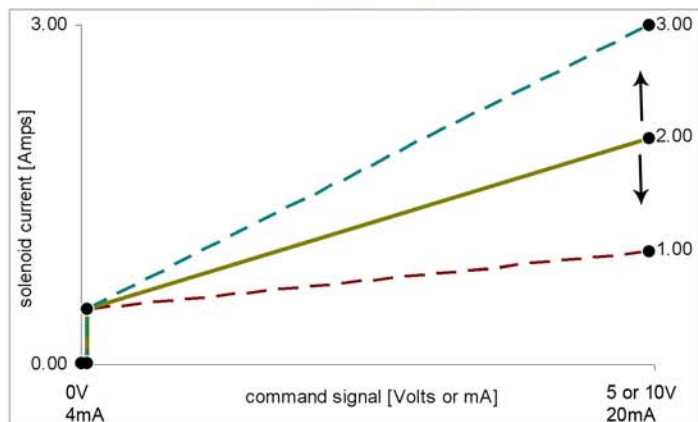


L_o: LOW,
Minimum Current Output, **0.00** to **2.99** [Amps]

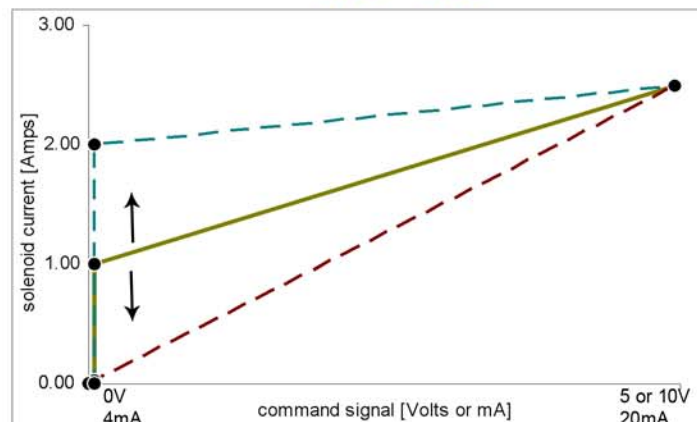


r_{UP}: RAMP UP,
Time for Output to Increase from min to max, **0.0** to **99.5** [SEC]

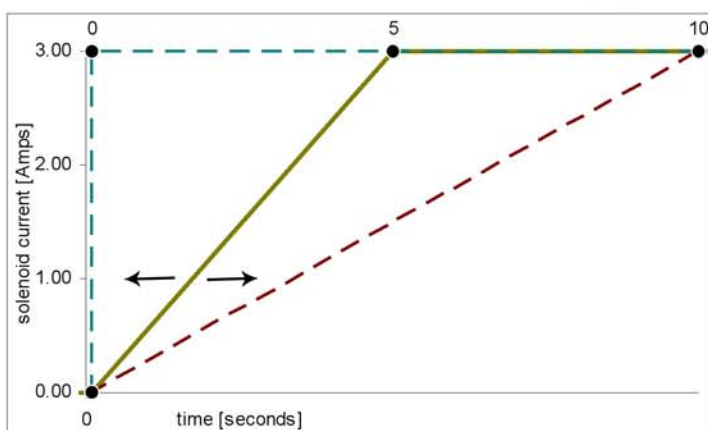


r_{dn}: RAMP DOWN,
Time for Output to Decrease from max to min, **0.0** to **99.5** [SEC]

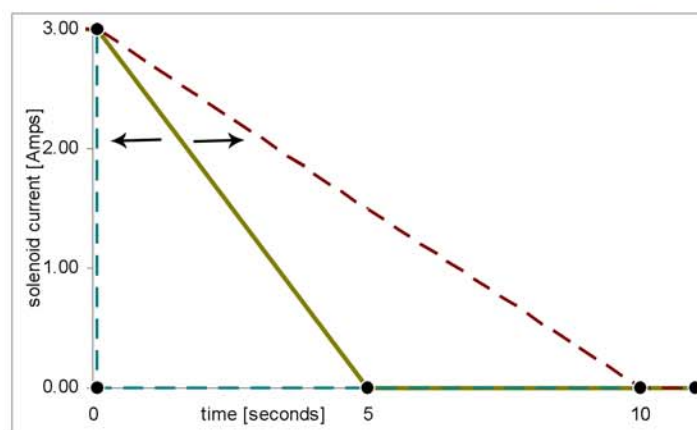

C_{db}: COMMAND DEADBAND,
Output disabled if command signal less than deadband, **0** to **5** [%]

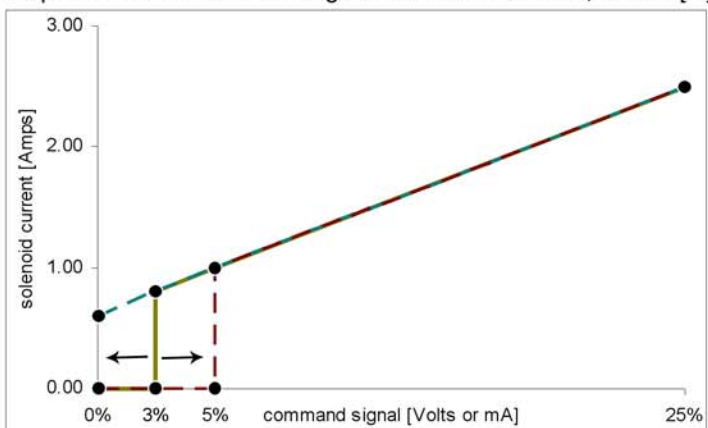

d_{Fr}: DITHER FREQUENCY,
40 (40Hz) to **450** (450Hz)

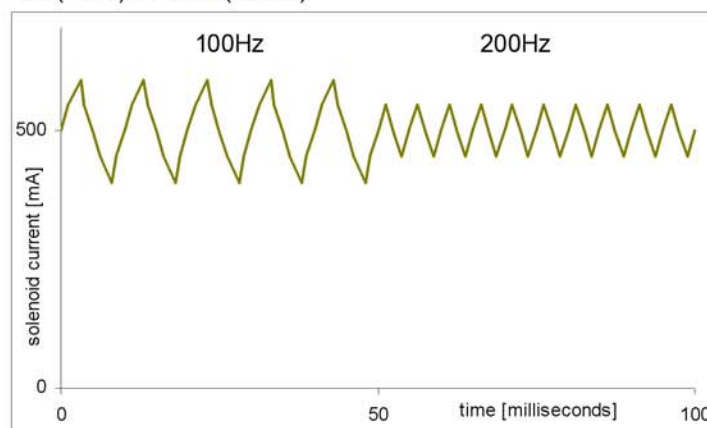

Stockholm
Turebergsvägen 5
SE-191 47 Sollentuna
Tel. +46 (0)8-59 470 470
Fax +46 (0)8-59 470 479

Göteborg
EA Rosengrens gata 29
SE-421 31 V:a Frölunda
Tel. +46 (0)31-499 490
Fax +46 (0)31-499 499

Malmö
Carlsgratan 12A
SE-211 20 Malmö
Tel. +46 (0)40-699 81 80
Fax. +46 (0)40-699 81 81

LE PSX-0109-A

LE PSX SET-UP PROCEDURE

(NOTE: Prior to setting up parameters, you must select proper Input Signal setting for your system)

Available Input Signal options

in: **10** (0 to 10V) <=Default
in: **5** (0 to 5V)
in: **420** (4 to 20mA)

Applying improper Input Signal to wrong setting on the Driver may be damaging to Driver Unit and may cause driver to fault to Error Status mode

SET-UP

1. At power up, the display will show either the output current signal or the input signal (Default display setting shows the output signal). The decimal point will be flashing.
2. Rotate SELECT to enter the set-up mode
3. When you reach the setting you want to modify, rotate ADJUST up or down to the desired value.
4. To modify another setting, rotate SELECT again and repeat.
5. The Driver is fully functional during the set-up procedure with any adjustments effective immediately.
6. In order to write the new settings in the memory and return to normal mode of operation, rotate SELECT until the display shows **SR** and then rotate ADJUST or wait for 100 seconds.
7. If you do not want to save the new settings you have just modified, you must disconnect the Driver from the power supply before the end of the 100 seconds to restore the previous settings.
8. After saving parameters to memory, the decimal point will be flashing and the Driver display will be back showing either the output current signal or input signal depending on your **di** selection.
9. To start over completely, you can restore the factory settings by rotating SELECT to **rFP** and then rotate ADJUST up past 10 for the display to reset. (NOTE for Step 9: You may have to adjust your Input Signal Setting again if you reset to factory settings.)

LE PSX SETTINGS & RANGE

Hi: HIGH, Maximum Current Output, **0.20** to **3.00** [Amps]
Lo: LOW, Minimum Current Output, **0.00** to **2.99** [Amps] (See: NOTE 1)
rUP: RAMP UP, Time for Output to Increase from min to max, **0.0** to **99.5** [SEC]
rDn: RAMP DOWN, Time for Output to decrease from max to min, **0.0** to **99.5** [SEC]
Cdb: COMMAND DEADBAND, Output disabled if command signal less than deadband, **0** to **5** [%]
dFr: DITHER FREQUENCY, **40** (40Hz) to **450** (450Hz)
in: INPUT SIGNAL SELECTION, **5** (0 to 5V) or **10** (0 to 10V) or **420** (4 to 20mA)
di: DISPLAYED SIGNAL FOR TROUBLESHOOTING, **0** (command signal in [Volts] or [milliAmps]) or **1** (solenoid current in [Amps])
Flashing decimal point is an indicator for present display mode
-Fast Flashing decimal point, several flashes per second indicates **di** = **0**
-Slow Flashing decimal point, 1 per second indicates **di** = **1**
-No Flashing decimal point or No decimal point indicates display in SETTING/ADJUST mode
SR: SAVE SETTINGS
rFP: RESET FACTORY PARAMETERS (See: NOTE 2)
Err: ERROR DETECTION STATE, Short Circuit, Reverse polarity protection and detection
Error 0 - No Errors
Error 1 - Overcurrent in driver likely due to short circuit in Solenoid
Error 2 - Current exceeding 20mA in "4 to 20mA" input mode
CLr: CLEAR ERROR, Clears Driver of Error State (See: NOTE 2)

NOTE 1: When adjusting the HI and LO parameters, note the HI parameter value cannot be adjusted below the LO parameter value as well the LO parameter value cannot exceed the HI parameter value.

NOTE 2: Adjust Parameter Value up past 9 to operate this command setting

OPTIONAL FEATURES (Please contact us for more information)

Pcd: PASSWORD, Adjust code for Password Protection settings for Lock or Unlock

Loc: LOCK, Locks driver to LOCKED state with Password set in **Pcd**

UnL: UNLOCK, Unlocks driver with correct Password set in **Pcd**

Only available in LOCKED state mode